




# 1 PART - BLOCK MOLD

With Maximold Silicone and Klean Klay



1. Tape clear acrylic over finished design

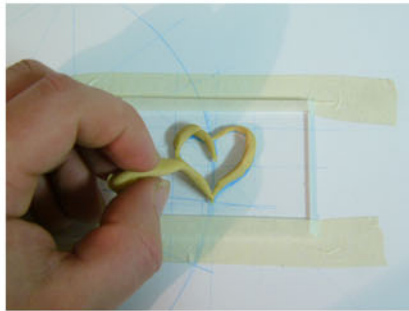

2. Apply Klean Klay in the shape of the design



3. Using sculpting tools, shape Klean Klay



4. Make Klean Klay wall 10mm taller than the model



5. Measure Maximold Silicone base




6. Measure Maximold Silicone catalyst, 10% of weight of base



7. Mix base and catalyst thoroughly



8. Mix to a uniform colour

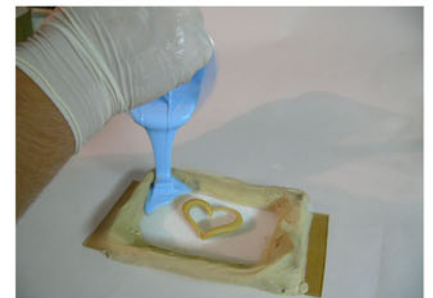

9. Pour into mold from corner until full



10. Allow to set for 12+ hours



11. Remove Klean Klay to save for another project. One part mold now finished



12. Finished mold used to create Easycast Jewellery with tin powder